

5/19/2015

**INSTALLATION INSTRUCTIONS**

PART NO. 52-908

CHROME LOWER FRONT COWL

FOR HONDA GL1800 GOLDWING/F6B/VALKYRIE

2001-NEWER GOLDWING/ ALL F6B/2014-NEWER VALK

ITEMS REQUIRED: 5MM ALLEN WRENCH

## INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE THEM ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

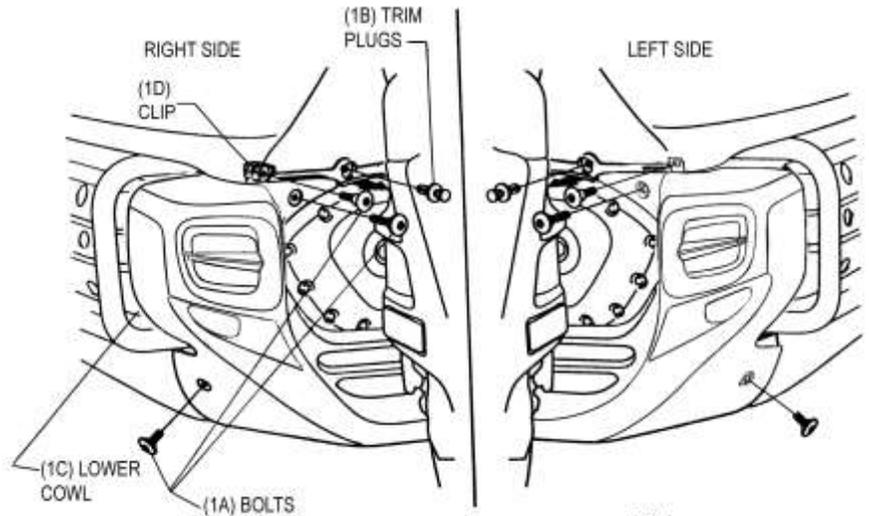


FIG 1

5/19/2015

**INSTALLATION INSTRUCTIONS**

PART NO. 52-908

CHROME LOWER FRONT COWL

FOR HONDA GL1800 GOLDWING/F6B/VALKYRIE

2001-NEWER GOLDWING/ ALL F6B/ 2014-NEWER VALK

ITEMS REQUIRED: 5MM ALLEN WRENCH

## INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE THEM ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

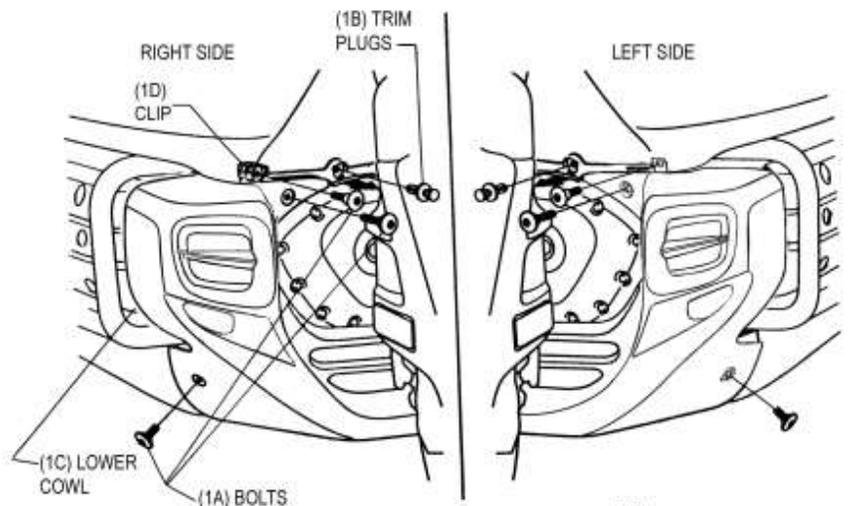


FIG 1