

Copyright © 2016 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 10-108/10-109

H7 LED HEADLIGHT IN GL1800

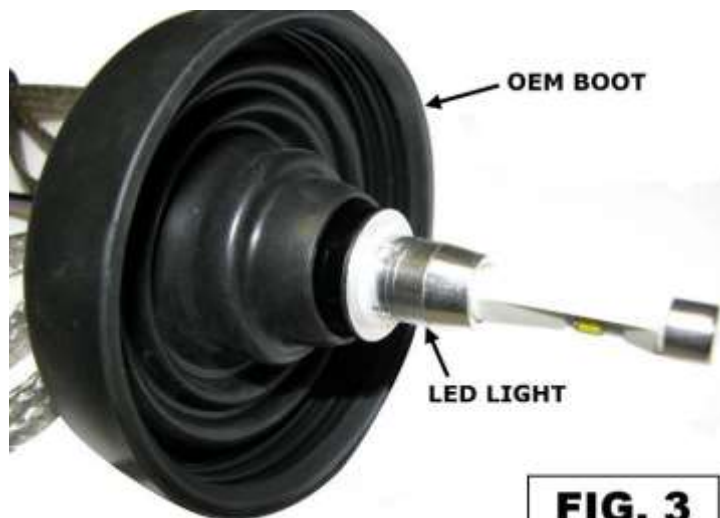
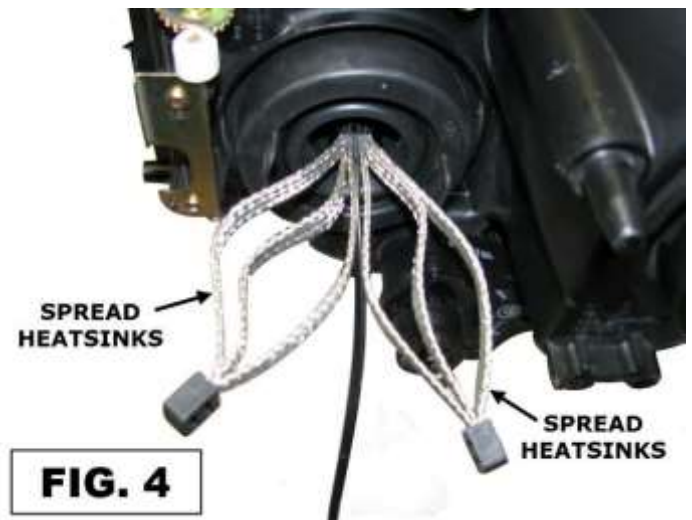
11/15/2016

FITMENT: HONDA GOLDWING GL1800 AND F6B

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

INSTALLATION:

1. UNPLUG THE CONNECTOR FROM THE BACK OF THE HEADLIGHT BULB.
2. PULL THE OEM RUBBER BOOT FROM THE HEADLIGHT AND SET ASIDE.
3. RELEASE THE WIRE CLIP HOLDING THE BULB IN BY PUSHING IT IN AND DOWN ON THE LOWER LEFT SIDE.
4. REMOVE THE OEM BULB. *NOTE: DO NOT TOUCH THE GLASS ON THE BULB IN CASE YOU EVER WANT TO REUSE IT.*
5. TAKE THE LED BULB AND REMOVE THE MOUNT FROM IT BY HOLDING THE LIGHT AND TURNING THE MOUNT CLOCKWISE. SEE FIG. 1.
6. PLACE THE MOUNT IN THE HEADLIGHT SOCKET AS SHOWN IN FIG. 2. MAKE SURE THE TAB IS AT THE TOP AND THE BLACK RING IS TO THE BACK OF THE BIKE.
7. LOCK THE WIRE CLIP AS SHOWN IN FIG. 2.
8. INSTALL THE OEM RUBBER BOOT ONTO THE LED LIGHT BODY AS SHOWN IN FIG. 3. YOU MAY WANT TO USE A SMALL AMOUNT OF SOAP ON THE RUBBER TO MAKE IT SLIDE ON EASIER.
9. INSTALL THE LED LIGHT INTO THE MOUNT. PUSH IT IN UNTIL IT STOPS AND THEN ROTATE IT CLOCKWISE TO LOCK IT IN PLACE.
10. PUSH AROUND THE EDGES OF THE RUBBER BOOT TO SECURE IT BACK ON THE HEADLIGHT HOUSING.
11. SPREAD THE HEATSINKS AS MUCH AS POSSIBLE AS SHOWN IN FIG. 4.
12. PLUG THE CONNECTOR ON THE LIGHT INTO THE BIKES CONNECTOR.
13. USE THE SUPPLIED DOUBLE-SIDED TAPE TO MOUNT THE LED DRIVER TO THE BIKE.
14. TEST LIGHT AND ADJUST AS NEEDED.

FIG. 1**FIG. 2****FIG. 3****FIG. 4**